

LCT-1631A Quick Install Manual

This package contains:

- 1 x LCT-1631A Single Input HD DVB-T MPEG-2 Encoder / Modulator
- 1 x 3.5mm to 2 RCA Audio Lead
- 1 x Power Adaptor
- 1 x Quick Install Manual


Inspect the package before starting installation to ensure there is no damage and all supplied contents are present. Contact your distributor or dealer should the device be damaged, or package contents are incomplete.

Hardware Installation and Connections

It is highly recommended that quality cables and connectors be used for all video and audio source connections.

1. Use a HDMI cable to connect the video source to the LCT-1631A HDMI IN.
2. Use a Component cable to connect the video source to the LCT-1631A Component IN.
3. Use a Composite cable to connect the video source to the LCT-1631A Composite IN.
4. Use the supplied Audio cable to connect the video source to the LCT-1631A Audio IN.
5. Use a coaxial cable lead to connect from the LCT-1631A RF OUT to the TV system.
6. Connect the included power supply to the LCT-1631A DC 12V power jack.
7. Connect the power supply the power point.
8. Change program requirements as per front LCD of GUI – password for LCD is “0000”
9. If you require Web Management, connect an RJ45 cable to your PC and open browser (Firefox for example) and type in IP address (see below)

Default GUI address is 192.168.1.9 (Username: admin – Password: Admin123)

For full installation manual – please refer to  full installation manual

Default settings

- Channel Name – Channel 1
- RF Output Channel – 39 UHF (606.5Mhz)
- LCN – 101
- Launch Level – 95dB

For urgent support – please call +61448100429